

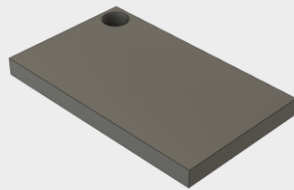
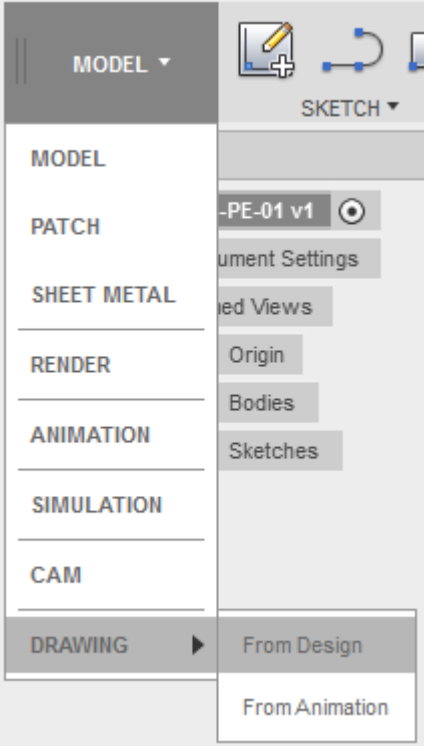
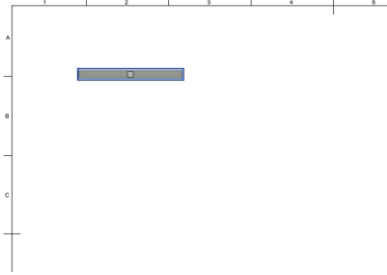
Lesson: Practice Exercise

Practice: Create a detailed drawing.

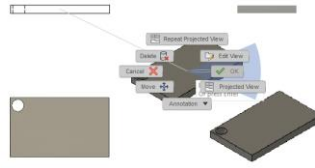
Learning Objectives:

- Create drawings views.
- Add drawing dimensions.

Step 1: Create a detailed drawing

<p>1. Upload and open the file L8-PE-01.f3d.</p>	
<p>2. Select Model > Drawing > From Design.</p>	
<p>3. OK all the default drawing creation settings and place the base view in the upper left corner of the drawing view and OK.</p>	

4. Press P on the keyboard to begin creating projected views and place views to the right, below and at the 4 o'clock position. Press Enter or right click and select OK to end view placement.



5. Press D on the keyboard to start the dimension tool. Place the dimensions shown. Save the file.

